



# DHAK

BT SPEAKER

## User Manual



Please read user manual carefully and keep it for your records

### Notice for Use:

- 1.For the first use, please charge the battery first. Do not play music while charging.
- 2.Please use certified DC 5V cable for charging.
- 3.When music is played, if the sound is intermittent, it may be lack of power, please charge it firstly.
- 4.Active the Bluetooth feature on the phone,laptops or tablets, and set the device to search for wireless device.


### Specifications:

Material: ABS+FABRIC  
 Bluetooth version: 5.0  
 Bluetooth distance: 10M  
 Rechargeable battery: 1200mAh  
 Speaker power: 1\*5W  
 Function: BT/FM/USB/TF/Handsfree/TWS  
 Dimension: 114\*114\*131mm

### Includes:

- 1\*TYPE-C charging cable
- 1\*User Manual
- 1\*instruction card

### Functional buttons:

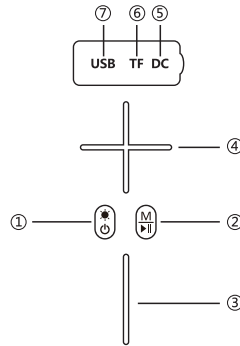

- ①ON/OFF,Light mode
- ②Mode switch,Play/Pause
- ③Volume down/Previous song
- ④Volume up/Next song/TWS
- ⑤TYPE-C for charging
- ⑥TF card playback
- ⑦U disk playback

### ON/OFF Button:

Long press to turn on/off the speaker.  
 When you turn on the device, a sound will indicate "Bluetooth".  
 Activate the Bluetooth feature on your phone, and set the phone to search for Bluetooth device GBT-888 DHAK.  
 When Powered on,short press to adjust the light

### M Button/ Play&Pause Button

Short press to pause or play music  
 For incoming calls, click to answer the call, click again to hang up the call, double click to reject the phone call.Double click in short time to redial the last number.  
 Long press to switch among BT,FM,USB Drive,TF Card.

### TWS Function(need 2pcs speakers):

TWS allows you to sync 2 GBT-888 DHAK. Turn on both speakers. Make sure neither of GBT-888 DHAK are connected to any device. Pick one of the 2 speakers and press "+" button twice quickly (mean Volume up/next song button)  
 Wait for the pairing names of both speakers to become one on your Bluetooth device list and once the two pairing names combine into one, select the one name. Double click again to disconnect TWS.

### FM Mode:

When switch to FM mode, a sound will indicate "FM radio mode".  
 Short press M/PLAY&PAUSE button,The unit will scan from the lowest frequency to the highest frequency and will automatically save the stations found.  
 The unit will start to play the first station saved after scanned the whole FM band.  
 Long press volume button to adjust the volume to obtain the desired volume level.  
 Short press the volume button to select next or previous preset station.

### Next Music/Increase Volume Button:

Short press to change to next music  
 Long press to increase the volume

### Previous Music/Decrease Volume Button:

Short press to change to previous music  
 Long press to decrease the volume

### USB Reading/TF Card Reading:

Insert the USB drive/TF card into the speaker to play MP3 file automatically, to change to previous/next music, adjust the volume by following the speaker buttons.

### Charging:

Connect the small end of the TYPE-C charging cable (included) to the TYPE-C port located on the back of the speaker. Connect the larger end of the cable to your computer's USB port or an AC adaptor(not included).The LED indicator will turn red while charging. Once fully charged, the red LED will turn off.

### Safety instructions:

Do not disassemble, throw away or damage this Product. Consult your local waste collection agency for proper disposal or recycling methods. This product is not a toy. Use extra caution while children are using this product.  
 Keep the wireless Speaker away from direct sunlight, fire and high voltage equipment. Do not store the Wireless Speaker inside a car during hot weather. Remember, a closed car acts as a greenhouse allowing the inside temperature to possibility reach over 70°C  
 Device may become warm while charging.Be assured to turn product completely off when plugging and unplugging into outlet.  
 Damage, shock, and/or injury can occur if this warning is not heeded properly.