WHITE SHARK

FIRECREST
WIRELESS GAMING HEADSET
PREMIUM line

UPUTE





1. LED Indikator: Bijeli LED - 2.4G način rada
   Plavi LED - BT način rada

2. \+ tipka
   * Jedan klik: Pojačavanje zvuka
   * Dugi pritisak: pojačavanje do Max. glasnoće
   * Dupli klik: sljedeća pjesma

3. Tipka za uključivanje/isključivanje.
   * Dugi pritisak 3 sekunde: on/off
   * Dupli klik: Prebacivanje Gaming mode / Music mode
   * Jedan klik (dok se sluša glazba): Reprodukcija/Pauza
   * Jedan klik (za vrijeme dolaznog poziva): javljanje na poziv, jedan klik za prekid poziva
   * Dugi pritisak 3 sekunde (za vrijeme dolaznog poziva): Odbijanje poziva
   * Trostruki klik: Siri glasovni asistent

4. \- tipka.
   * Jedan klik: Stišavanje zvuka
   * Dugi pritisak: stišavanje do min. glasnoće
   * Dupli klik: prethodna pjesma

5. Prekidač načina rada.
   * Gore: 2.4G način.
   * Dolje: BT način.

6. Type-C sučelje za punjenje i 3.5mm Audio sučelje.

7. Ugrađeni mikrofon

8. Odvojivi mikrofon

9. MIC tipka
   Jedan klik: Uključivanje/isključivanje mikrofona
   Dupli klik: Prisilno otpajanje veze / ponovno uparivanje

Glasovne poruke:
* Glasovna obavijest o praznoj bateriji aktivirat će se 20 minuta prije isključivanja slušalica. Oglasit će se 3 zvučna signala svakih 5 minuta, tako da će zadnjih 20 minuta biti 4 podsjetnika, * Jedan zvučni signal: mikrofon uključen
* Dva zvučna signala: mikrofon isključen, * Jedan zvučni signal: Max. glasnoća
* Ženski glas za uključivanje/isključivanje slušalica


Napomene:
Kako bi slušalice nastavile raditi bežično tijekom punjenja, korisnici prvo moraju priključiti USB kabel na izvor napajanja, a zatim ga priključiti na Type-C sučelje slušalica. U suprotnom, ako prvo priključite Type-C na slušalice, slušalice će se ugasiti i prebaciti se na žičani način rada.

WHITE SHARK

FIRECREST
WIRELESS GAMING HEADSET
PREMIUM line

USER MANUAL



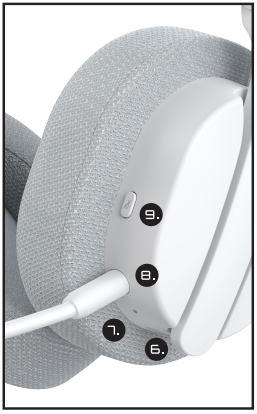

1. LED Indicator: White LED - 2.4G Mode
   Blue LED - BT Mode

2. + key
   * Single click: Volume +
   * Long press: until to Max. Volume
   * Double click: next song

3. Power key.
   * Long press 3 Seconds: Power on/off
   * Double click: Switch between Gaming mode and Music mode
   * Single click(when playing music): Play/Pause
   * Single click(when there is an incoming call): pick up the call, single click again to hang up the call
   * Long press 3 Seconds(when there is an incoming call): Reject the call
   * Triple click：Siri Voice assistant

4. - key.
   * Single click: Volume -
   * Long press: until to min. volume
   * Double click: previous song

5. Mode switch.
   * Up: 2.4G Mode.
   * Down: BT Mode.

6. Type-C Charging port and 3.5mm Audio port.

7. Built-in microphone pick up port

8. Detachable microphone

9. MIC Key
   Single click：Turn on/off Microphone
   Double click：Force to disconnect/re-pair

Prompt voice:
* Low battery voice prompt will be activated 20 minutes before headset power off. It will be 3 beeps every 5 minutes, so 20 minutes will have 4 times reminder, * One beep: microphone on
* Two beep: microphone mute, * One beep: max. volume
* female voice: power on/off

Remarks:
To support headset is working while charging feature, users must plug USB cable to source power firstly, then plug headset Type-C to headset. Otherwise if plug Type-C to headset firstly, headset will power off and switch to wired mode automatically.